



# Automated Pure Water Product Instructions

## The High Flow Mineral Extractor

*For 2-1/2" tank threads*

The MINERAL EXTRACTOR offers an inexpensive way of removing the expelled bed of any size or height tank without removing the tank. It works with water pressure, not suction. It will work on any and all type beds, and will even remove the gravel bed if needed.

The MINERAL EXTRACTOR has a sealed cavity that is filled with liquid silicon to lubricate the "O" ring seals on the riser tube. The main body of the MINERAL EXTRACTOR carries a 5 year guarantee against cracking.

For larger commercial units with a fixed distributor, there is a 4" offset extension adapter that will allow you to leave the distributor in place, and use the MINERAL EXTRACTOR with the same ease as on the smaller 2 1/2" residential tanks. (See Commercial High Flow Extractor Kit) .



### ***Directions for Use***

1. Remove control valve and riser tube from tank top.
2. Slide black adapter to bottom of riser tube near the tee.
3. Screw black adapter on to tank and push riser tube down to bottom of mineral bed. (Tee will stop at gravel bed)
4. Connect garden hose to inlet adapter.
5. Turn water on and mineral will flow out of the tank with water pressure at outlet spout. (Will remove 1 cubic foot of resin in approximately 60 seconds.)

**OPTION: FLEX CENTER SHAFT KIT** - This kit allows unit to be used with low ceilings, pump houses, well pits, etc.

**NELSEN**  
CORPORATION™

3250 Barber Road  
Norton, OH 44203  
Phone: 800.362.9686  
Fax: 888.544.8780

14035 W. El Cielo  
Goodyear, AZ 85338  
Phone: 866.445.4299  
Fax: 602.442.0447

4410 E Adamo Dr Suite 102  
Tampa, FL 33619  
Phone: 813.712.2270  
Fax: 813.712.2274

1012 Assembly Circle - # 100  
Schertz, TX 78154  
Phone: 855.674.0357  
Fax: 210.714.2571

[NelsenCorp.com](http://NelsenCorp.com)   [Commercial.NelsenCorp.com](http://Commercial.NelsenCorp.com)   [VestaWater.com](http://VestaWater.com)