



Automated Pure Water Product Instructions

Mineral Extractor for Chambered Vortech Tank

The Mineral Extractor is designed for use on chambered tanks with a fixed riser tube. The offset center shaft will slide along the side of the stationary tube.

Included is a "Cap Removal Tool", which is used to remove the plugs that separate the different chambers from each other. Also included is a lower chamber extension for the removal of media from the lower chambers, if necessary.




NOTE: The "Cap Removal Tool" can also be used as a refill tube, by removing the handle and using a funnel inside the tube to wash in the new media.

Directions for Use

For One or First Chamber Removal:

1. Remove head assembly from the vessel.
2. Screw black adapter with offset center shaft onto tank and push to bottom of chamber.
3. Attach water/garden hose and remove media from chamber.

For Second Chamber Removal:

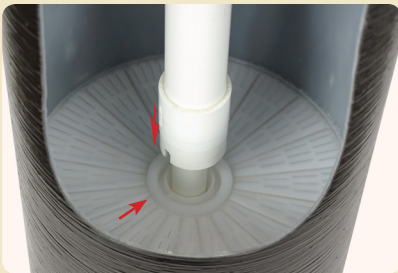

1. Remove extractor assembly from vessel.
2. Using the cap removal tool, slide tool down over riser/distributor tube to the cap at the bottom of the top chamber.
3. Align notches (as shown to the right) and push down counter clockwise to release the cap, then slide up the riser tube.
4. Repeat Step 2 (above) after adding lower extension tube.



CAUTION: Turn Water on Slowly to Remove Media, too Fast Will Clog the Extractor!

NELSEN

C O R P O R A T I O N

3250 Barber Road
Norton, OH 44203
Phone: 800.362.9686
Fax: 888.544.8780

10115 W Van Buren St #6
Tolleson, AZ 85353
Phone: 866.445.4299
Fax: 602.442.0447

4410 E Adamo Dr Suite 102
Tampa, FL 33619
Phone: 813.712.2270
Fax: 813.712.2274

1012 Assembly Circle - # 100
Schertz, TX 78154
Phone: 855.674.0357
Fax: 210.714.2571

NelsenCorp.com Commercial.NelsenCorp.com VestaWater.com